



24 hour Emergency Number

077 924 688 99



ISO 9001 FS54080



PORTABLE EXTINGUISHER MAINTENANCE

The fire control panel is operated by the 6 buttons which are mounted below the LCD. In order to gain access to the fire panel functions it is necessary to enter the 4 digit user code- this is to prevent unauthorised access.

In order to enter the user code, the password screen must be activated. This is done by: - **Pressing any of the buttons 1, 2, 3 or 6**



The number represented by each button is displayed on the fascia above the button.

Enter the user code 3545

The bottom line of the LCD shows the functions available with the buttons on which they are directly above.

Note, that buttons 1&2 have RESET and SILENCE BUZZER permanently assigned to them.

BUTTON 1 – RESET - Returns the fire alarm system to a normal clear condition – resetting the fire alarm detectors.

BUTTON 2 – SILENCE BUZZER – Causes the internal buzzer during a fire or fault condition to stop sounding. Any subsequent fire or fault condition will cause the buzzer to resound.

BUTTON 3 – SILENCE ALARMS – Is used to turn off the external alarm sounders after a fire activation. The control panel will however continue to indicate a fire condition and the internal buzzer will continue to bleep. Any subsequent fire activation will resound the external alarm sounders. When the alarm sounders have been 'silenced', the LCD option will show '**RESOUND**'. Pressing button 3 now, the external sounders will be turned back on and the LCD option reverts back to '**SILENCE**'.

BUTTON 4 – UP – Will take you up through the menu system.

BUTTON 5 – DOWN – will take you down through the menu system. Note with USER access you CANNOT enter the engineers menu.

BUTTON 6 – OK – is used to enter the menu choice which is highlighted on the LCD. For example, pressing button 6 on the LCD shown above, '**EXIT**' being the highlighted option – would take you out of the menu system.